




SURPRISE

PLUS WIDE



8x

1380 x 244 x 8mm
= **2,694 m²**

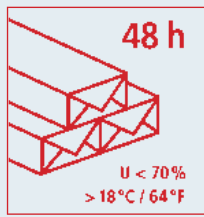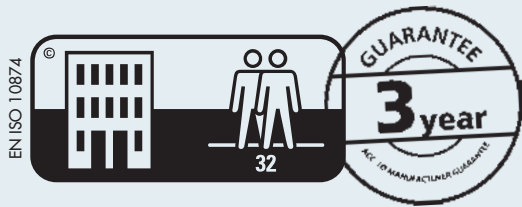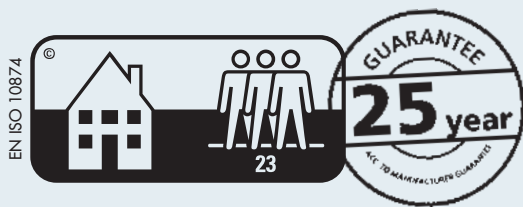

Institut Bauen
und Umwelt e.V.
Institute Construction
and Environment e.V.




Made in
Germany



13
DOP: KDE_LF_004
EN 14041:2004 / AC2006

Bodenbelag zur Verwendung in Gebäuden,
Floor Covering for internal use,
NB 0766, Cfl-s1, E1, DS

SWISS KRONO TEX GmbH & Co. KG
Wittstocker Chaussee 1
16909 Heiligengrabe
www.kronotex.com

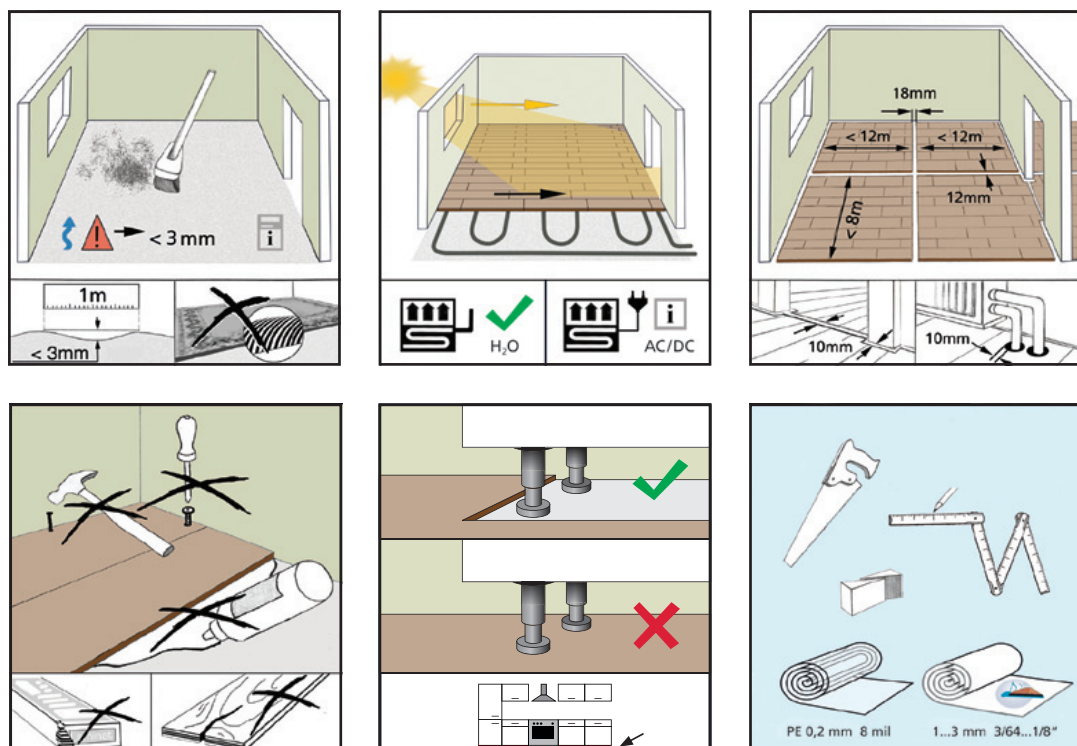

INSTALLATION

- Step 1: Room preparation and material layout. A 20 cm gap is marked for the underlayment. PE 0,2 mm underlayment is shown.
- Step 2: First row of planks. A 10 mm gap is marked between the first row and the wall.
- Step 3: Second row of planks. A 10 mm gap is marked between the second row and the wall.
- Step 4: Third row of planks. A 10 mm gap is marked between the third row and the wall.
- Step 5: Fourth row of planks. A 12° angle and a gap of $> 400\text{ mm}$ are marked.
- Step 6: Fifth row of planks. A 12° angle and a gap of $> 400\text{ mm}$ are marked.
- Step 7: Clicking the planks together. A "Clic" sound is indicated.
- Step 8: Final row of planks. A 10 mm gap is marked between the final row and the wall.
- Step 9: Wall trim. A 10 mm gap is marked between the wall trim and the wall.
- Step 10: Door trim. A 10 mm gap is marked between the door trim and the door.
- Step 11: Wall trim. A 10 mm gap is marked between the wall trim and the wall.
- Step 12: Wall trim. A 10 mm gap is marked between the wall trim and the wall.
- Step 13: Temperature and humidity requirements. A thermometer shows $20 - 22\text{ }^{\circ}\text{C}$ and a hygrometer shows $U\ 50 - 60\%$.
- Step 14: Final room setup. A chair and a table are shown. The text "Type 'W' soft / souple blando / мягкий" is displayed.

REMOVAL

